



{inclusion outreach}

1031 Lucas Avenue  
Victoria, BC V8X 5L2  
Tel 250-595-2088

[www.inclusionoutreach.ca](http://www.inclusionoutreach.ca)

## How to Use Hydro-Rhythm Dancing Water Speakers

### With an iPad or iPhone:

1. First, make sure the Hydro-Rhythm Dancing Water Speakers are plugged in via USB (into a computer, laptop, or using an adapter with an outlet)
2. Download 'CanTunes' from the app store (it's free!); CanTunes (by UVic CanAssist) imports the songs from your iTunes account and makes them easy to access by touching the picture of the album cover on the screen (you can choose from 2, 4, 6, 12, or 20 albums covers on the screen at one time).
3. Plug the 'Audio Out' cord into the headphone jack on the iPad or iPhone
4. Turn on music by pressing the album cover!



Respect

Competence

Inclusion

Presence

Choice



{inclusion outreach}

1031 Lucas Avenue  
Victoria, BC V8X 5L2  
Tel 250-595-2088

[www.inclusionoutreach.ca](http://www.inclusionoutreach.ca)

**With a radio or cassette tape (cds don't seem to work):**

1. First, make sure the Hydro-Rhythm Dancing Water Speakers are plugged in via USB (into a computer, laptop, or using an adapter with an outlet)

1. Plug the 'Audio Out' cord into the headphone jack on the radio/cassette player
2. Plug the radio/cassette player into a Powerlink
3. Plug a switch into the Powerlink
4. Choose the setting on the Powerlink that you would like to use
5. Press the switch to play music!



Respect

Competence

Inclusion

Presence

Choice